

 
HOW TO READ YOUR NEPTUNE METER

Flow indicators show the direction of flow through the meter:



- ON Water is in use
- Off Water not in use
- Flashing Water is running slowly
- (-) Reverse flow
- (+) Forward flow

Leak indicator displays a possible leak:

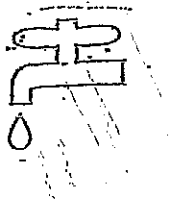

- OFF No leak (abnormal activity) indicated
- Flashing Intermittent leak indicates that water has been used for at least 50 of the 96 – 15 minute intervals during a 24-hour period.
- Continuous Continuous leak (abnormal activity) indicates water use for all 96 15-minute intervals during a 24-hour period.


RATE

Rate of Flow:

ON

Average flow rate is displayed every 6 seconds on LCD display.

***Leak Indicator Icon

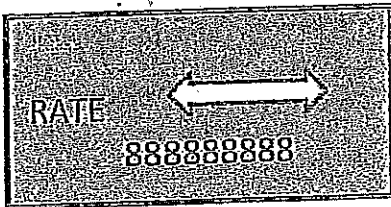


E-Coder BASIC LCD Display

Grosse Ile Township Water Department reads from left to right the first four (4) digits which is in U.S. thousand gallons.

Meter Register Face

Solar Cell, located at the top of the E-Coder supplies the power for the LCD panel (light activated). Please use a bright flashlight and place directly on the solar cell (larger window) to obtain reading data.

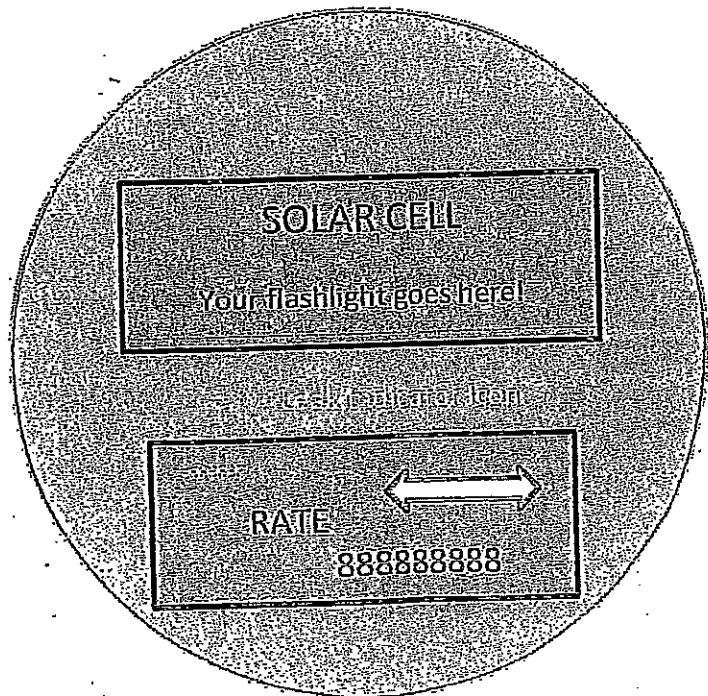

Grosse Ile Township
 Department of Public Services
 734-676-4422 Ext. 227